



Searwood 600 / XL 600

ASSEMBLY GUIDE



Scan for easy 3D instructions

Tap. Zoom. Rotate with official interactive instructions on the BILT app.

 


BILT.



9501073

07/31/24
enGB

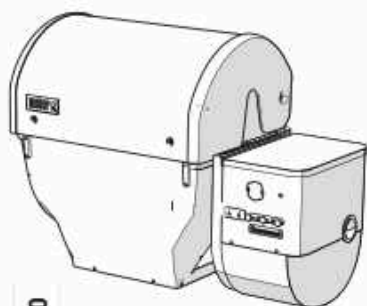


600

XL 600

1

 1



1

1



0

1



1

1



1

1



1

1




600

XL 600

1

 1



1

1



2

2



2

2



 
1

1



1

1

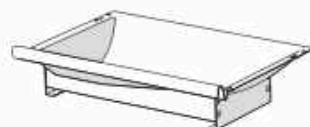

1

1



 
1

1



2

2

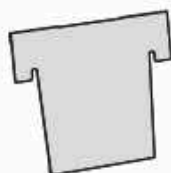

600	XL 600	
1	1	
1	1	
1	1	
1	1	
1	1	
1	1	
1	1	
1	1	
2	2	

600	XL 600	
2	2	
1	1	
1	1	
2	2	
4	4	
2	2	
20	20	

TOOLS INCLUDED:



- EN**
- ⚠ Two people required for assembly.
 - ⚠ Assemble barbecue on a flat, level, and soft surface.
 - ⚠ Do not use power tools for assembly.
 - ⚠ Always keep the lid closed while assembling or moving the barbecue unless otherwise instructed.
 - ⚠ Make sure all parts are assembled and all hardware is tightened before operating your barbecue.
 - ⚠ Remove all packaging materials and protective film before operating your barbecue.
 - ⚠ Keep all packaging to prevent damaging the barbecue during assembly.




- Download the free BILT™ app for 3D step-by-step instructions.

1



Note: Two people are required for this assembly step.


- ⚠ Remove enough packages from the cookbox to remove the lid, then remove all remaining packages from the cookbox.

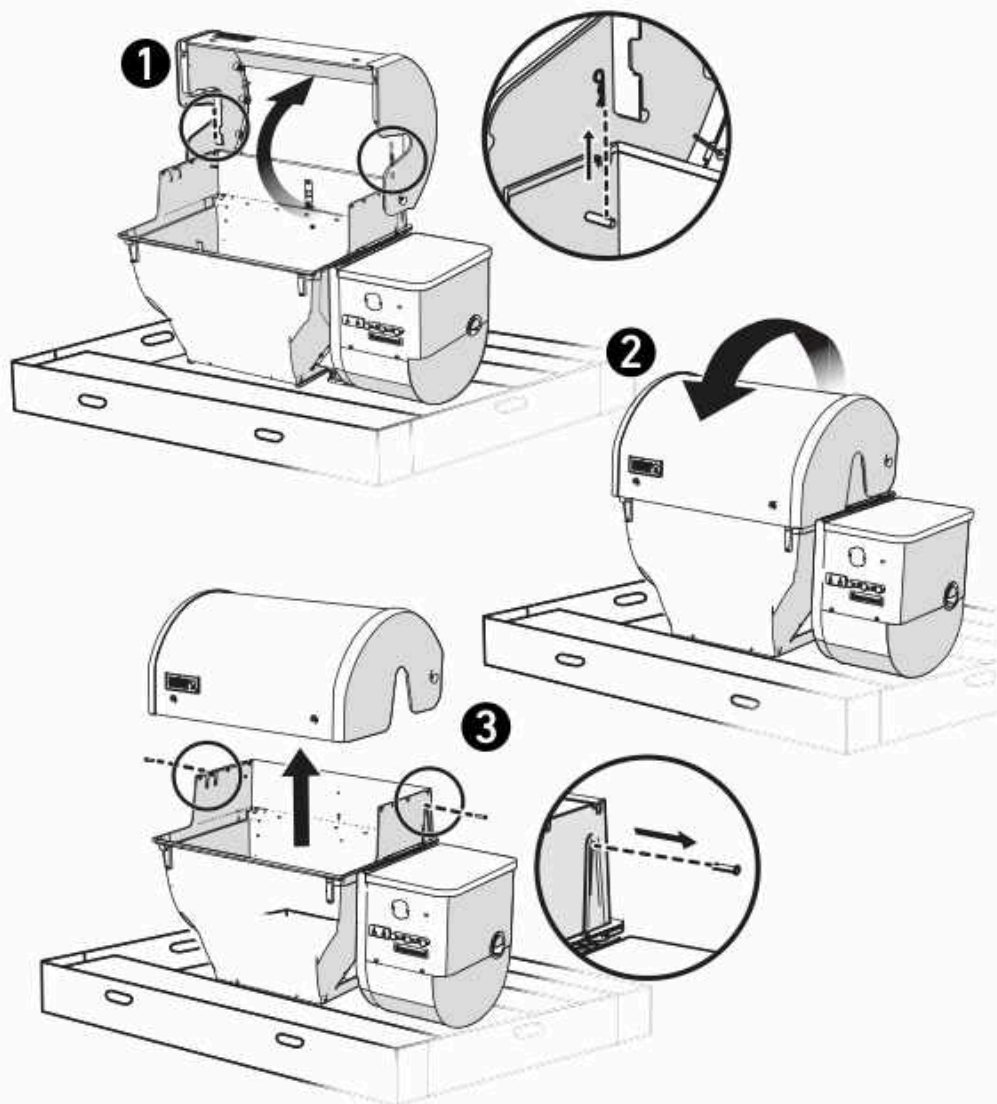

2

B

4-

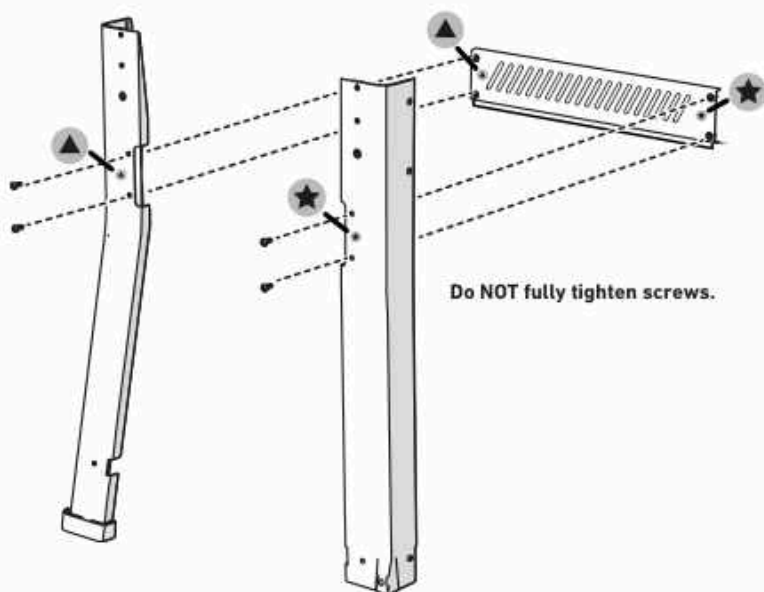


3



Note: Two people are required for this assembly step.

⚠ Use packaging to protect the barbecue from damage during assembly.

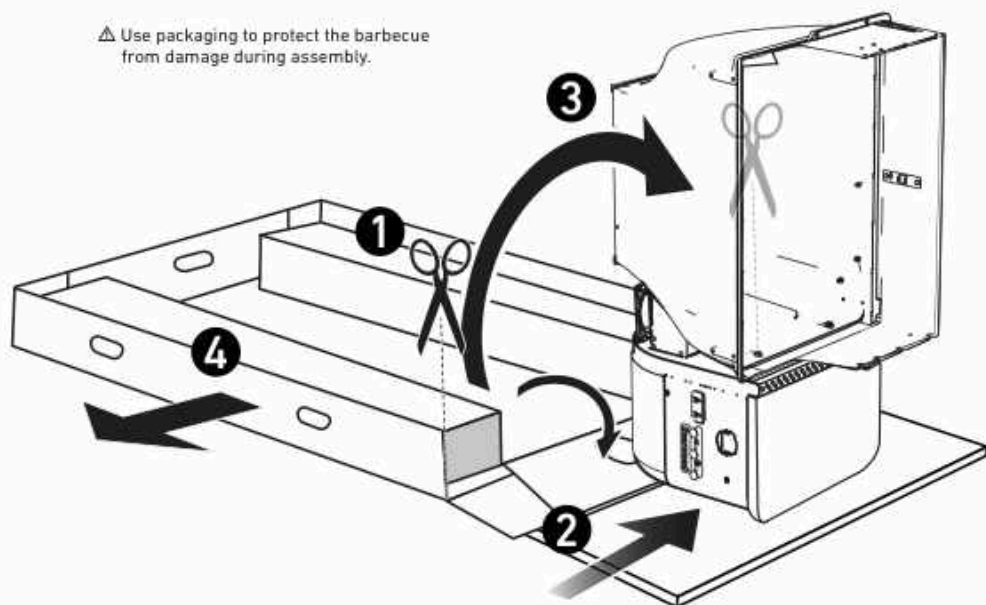

4




Note: Two people are required for this assembly step.

B

4-




Do NOT fully tighten screws.

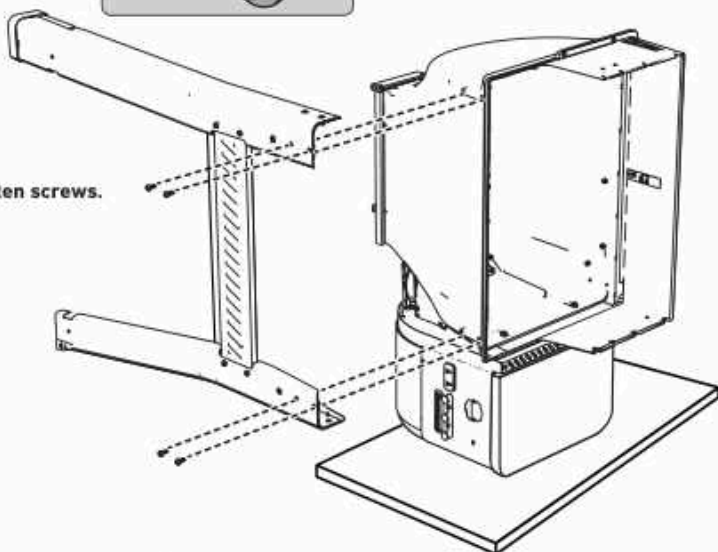

5


B

2-

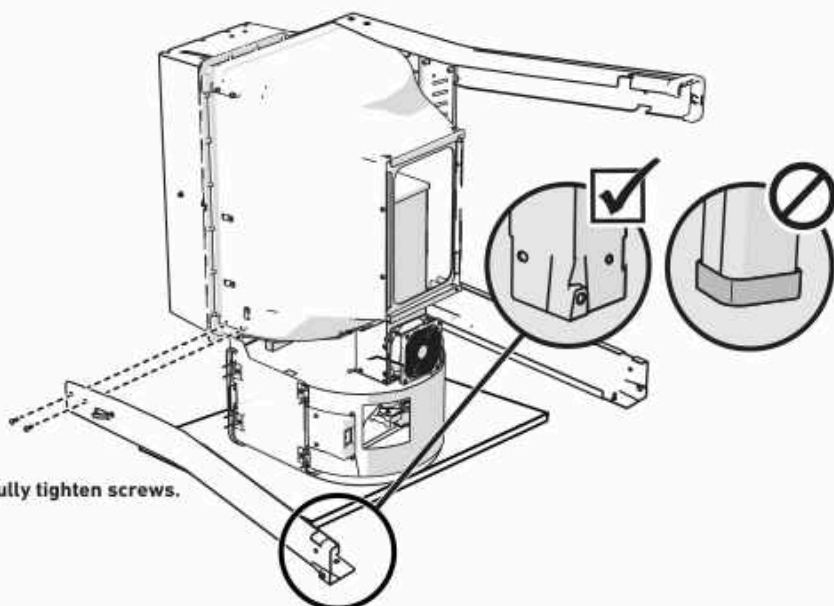

Do NOT fully tighten screws.

6

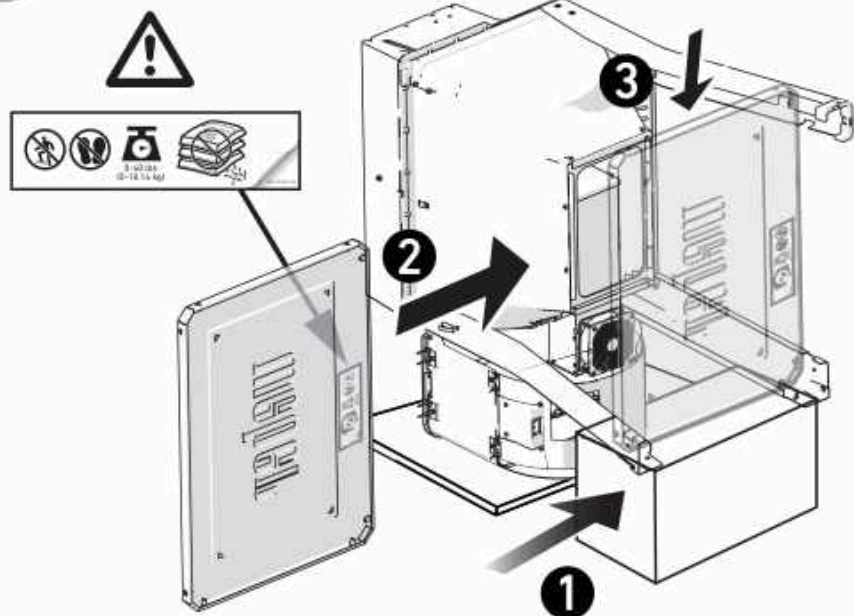


⚠ Use packaging to protect the barbecue from damage during assembly.

B

4-



Do NOT fully tighten screws.

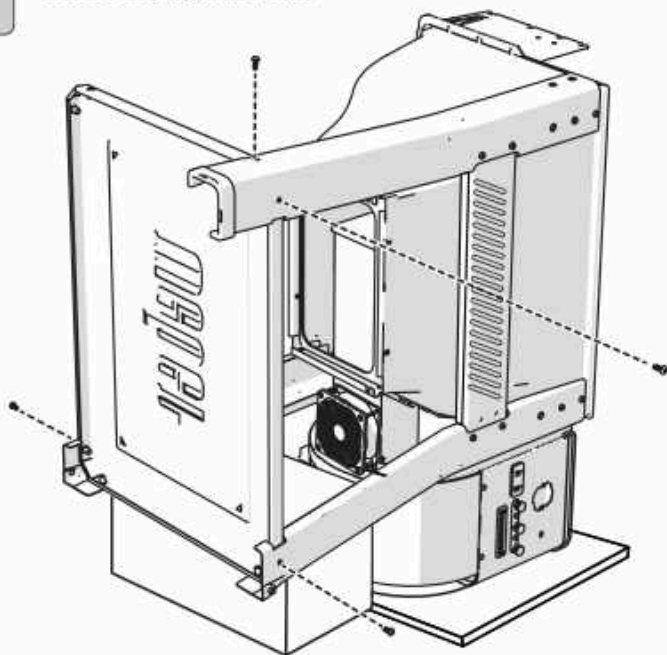


7

B


6-



 - Fully tighten ALL screws before lifting the barbecue upright.


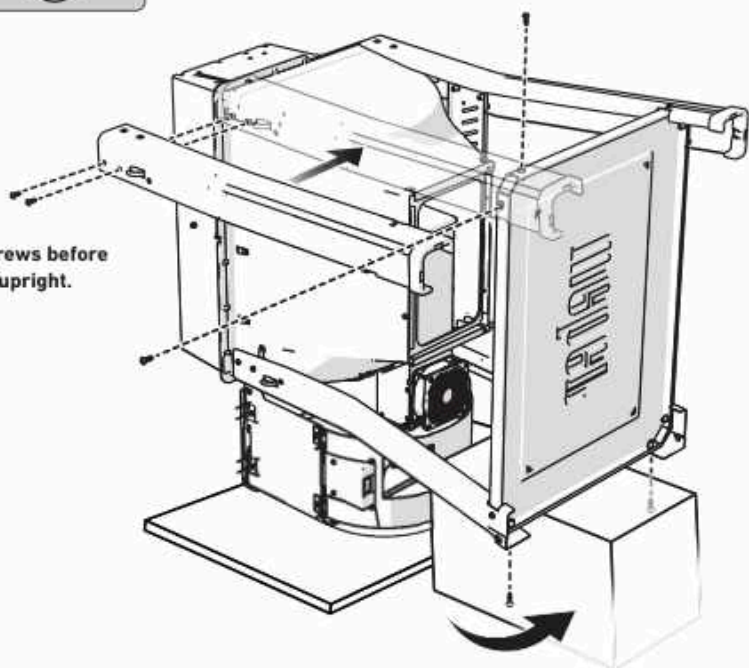


8

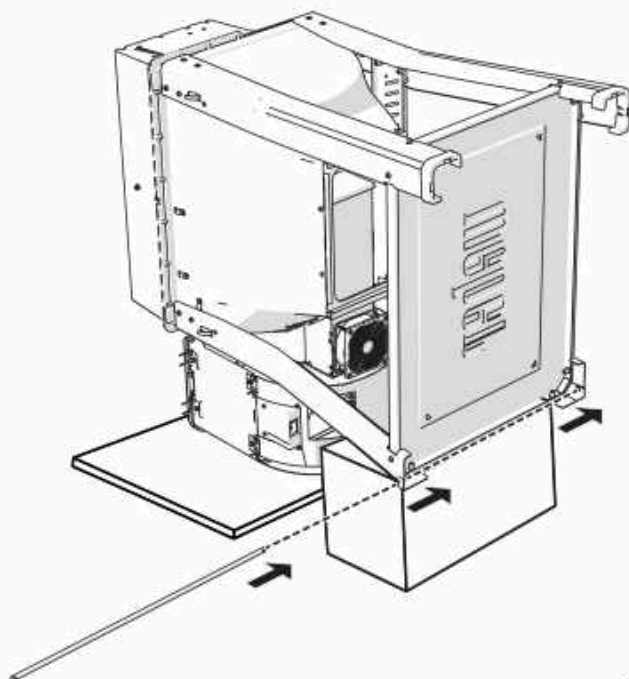 



9

  C 2-

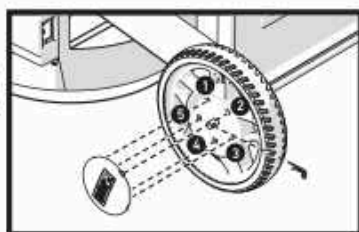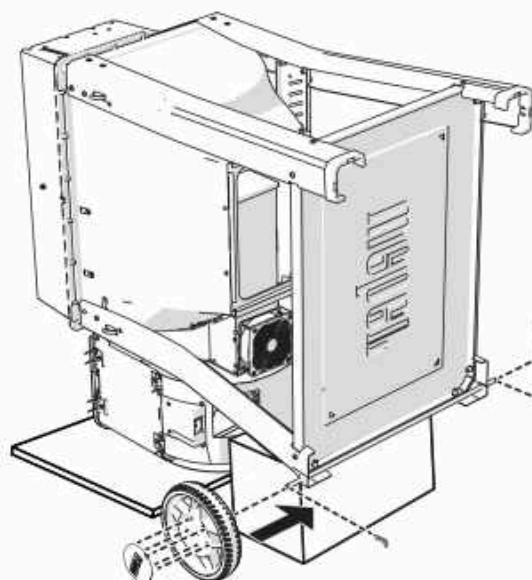

10

  
D 4-

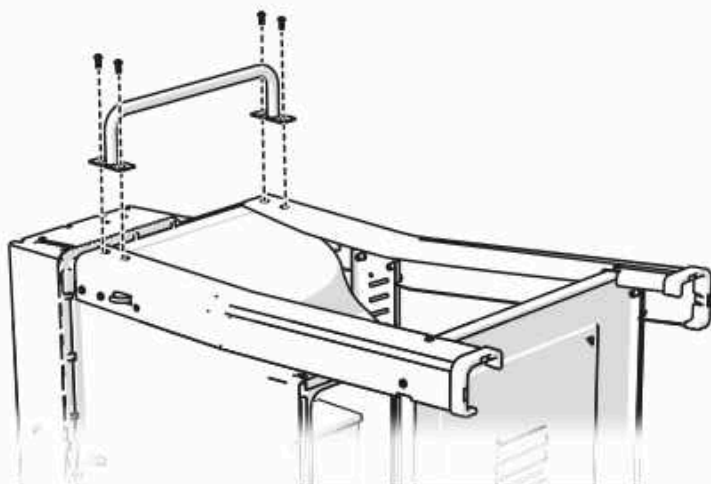





Note: Two people are required for this assembly step.



 
- Fully tighten ALL screws before lifting the barbecue upright.





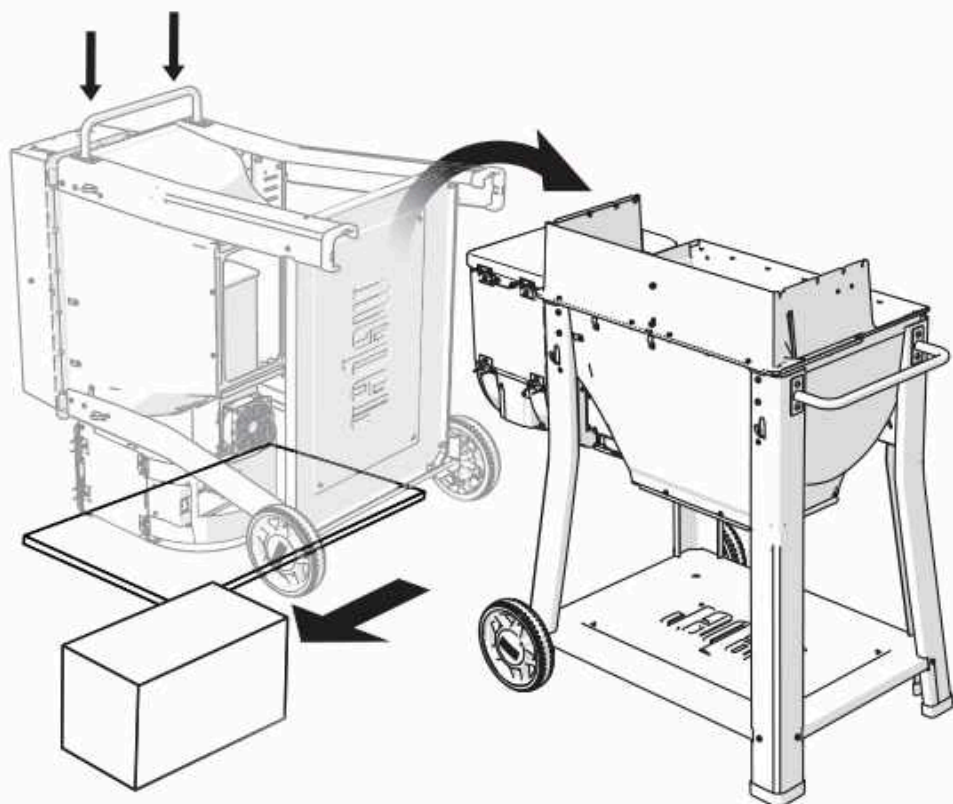


12

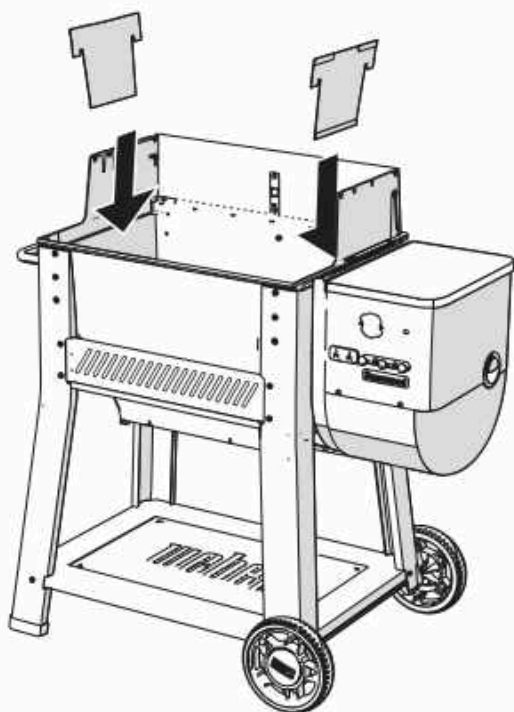 
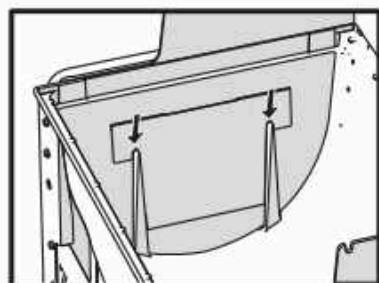 


13

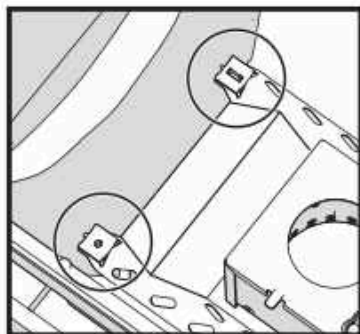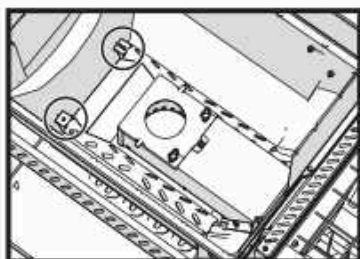
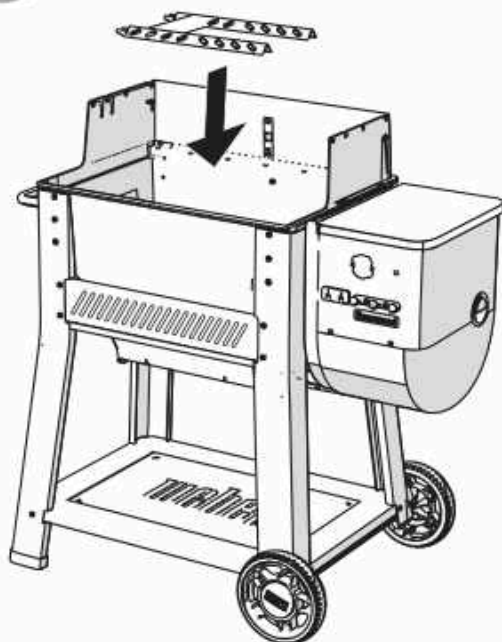


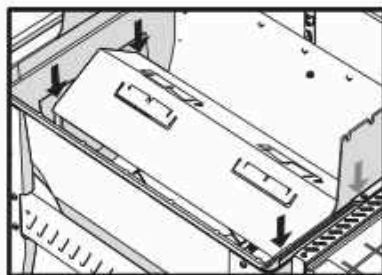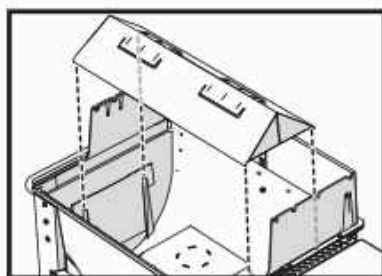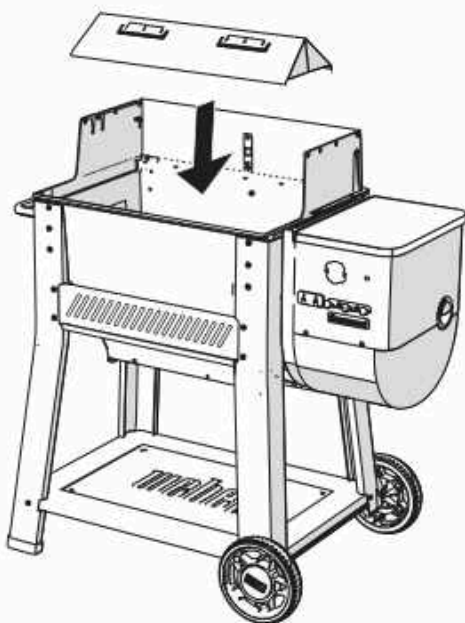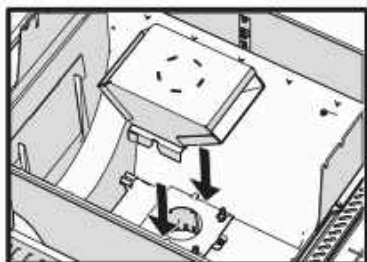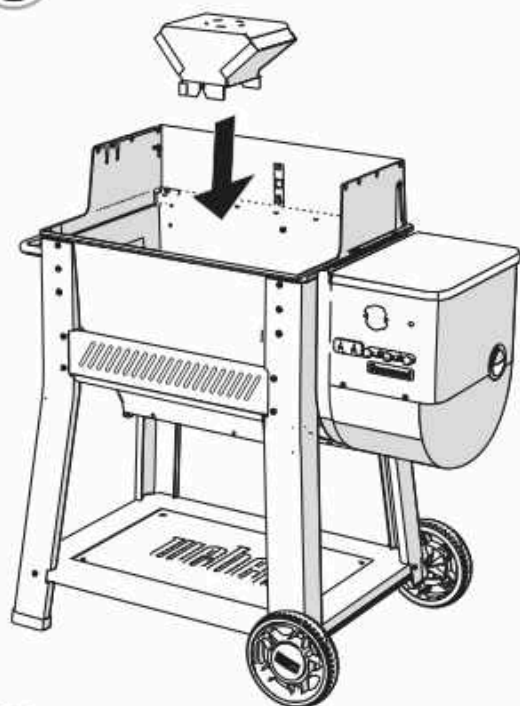     

16

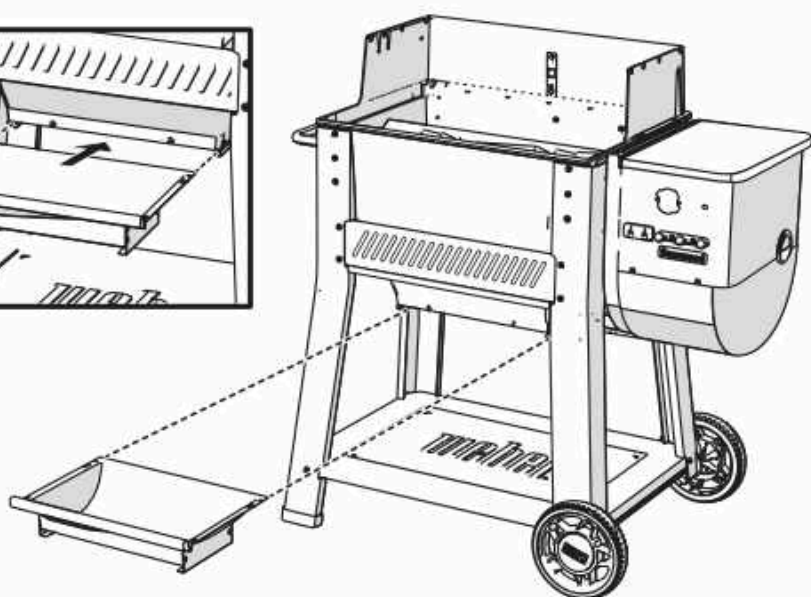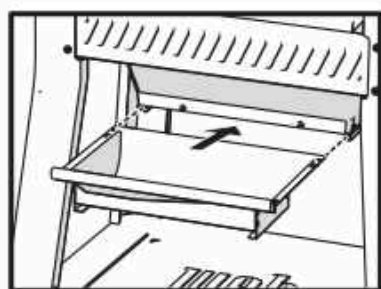  


17

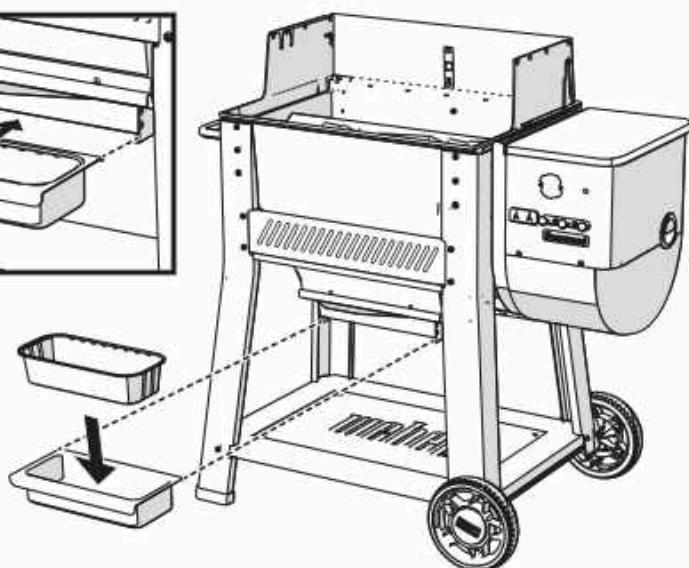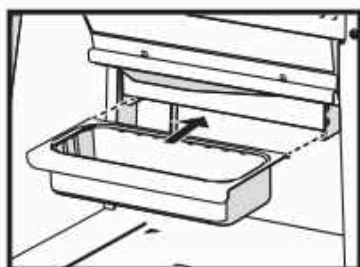  


18





 Note: Two people are required for this assembly step.

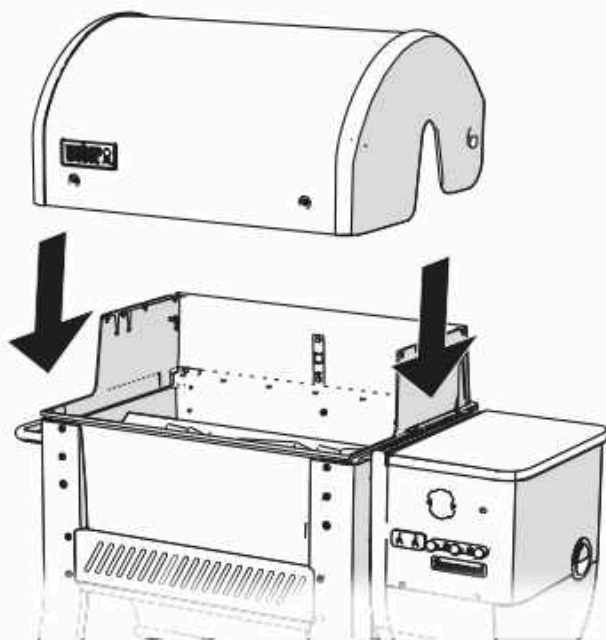

19

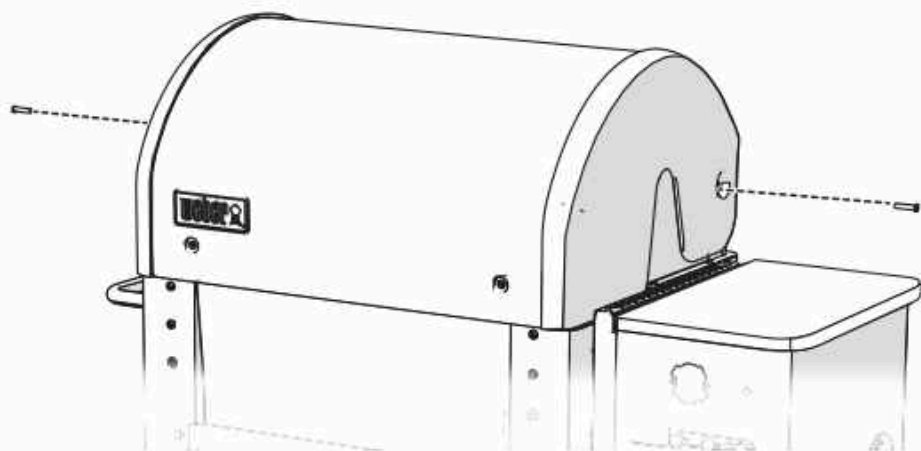 

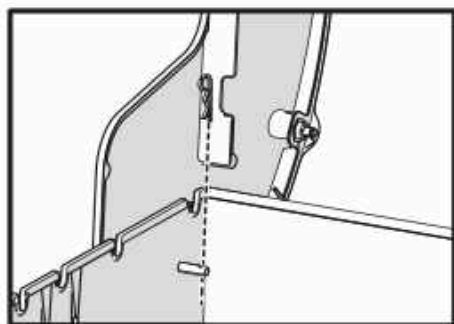 
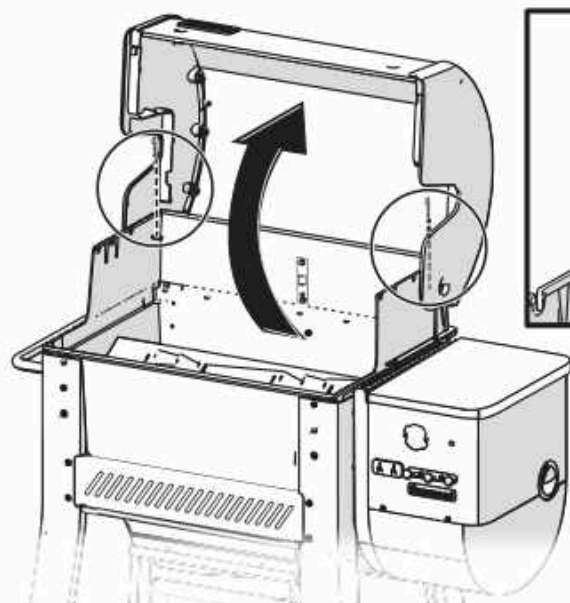 


21

1-

1-

  SEARWOOD 600

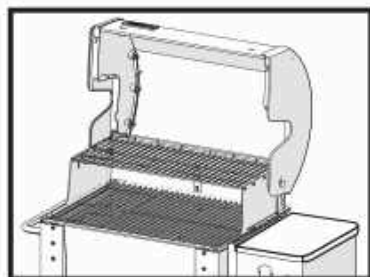
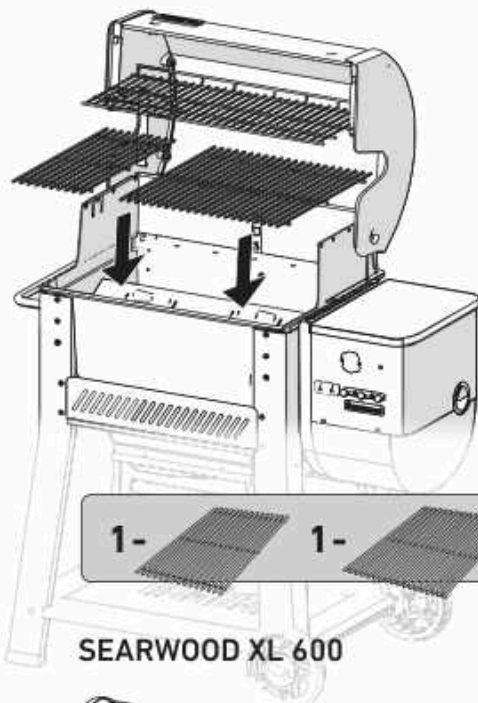


1-

1-


1-

  SEARWOOD XL 600

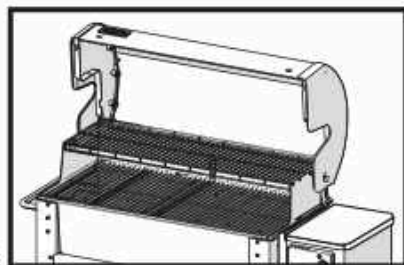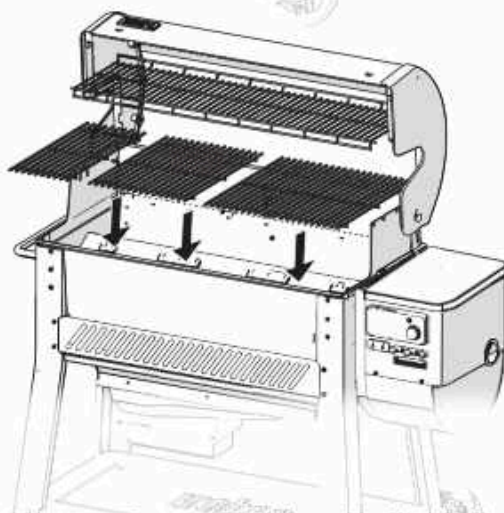


22


 
E 2-





F 2-

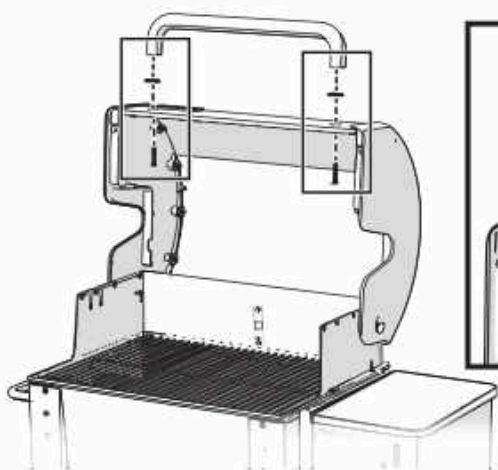 

23

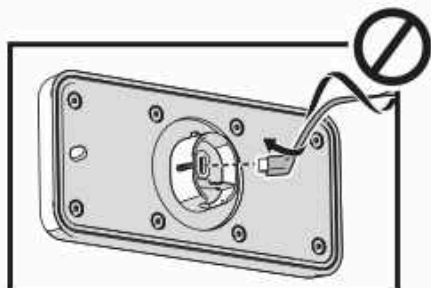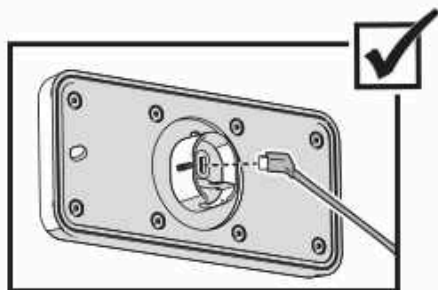  

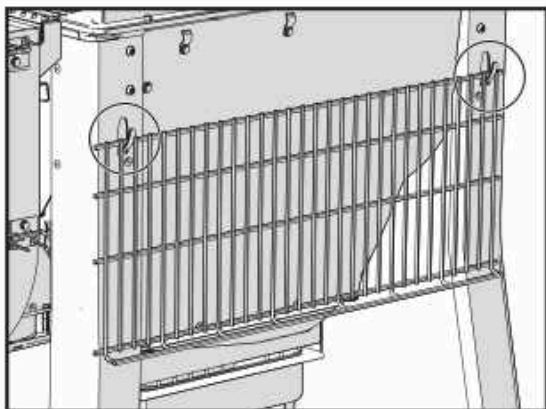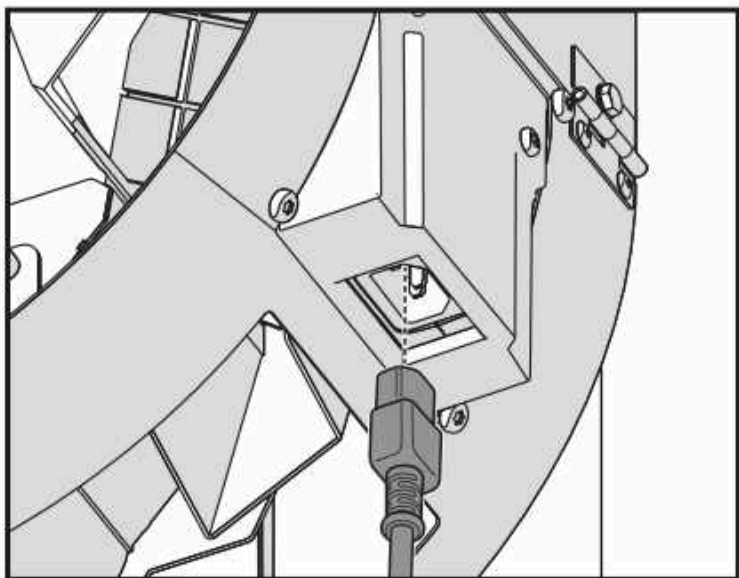  

- Make sure all parts are assembled and all hardware is tightened before operating your barbecue.



EN Scan the QR code to download the WEBER CONNECT app.

To fully activate and update your new WEBER CONNECT digital LCD controller, it is important to first download the WEBER CONNECT app.

Download, connect and register to receive:

- Flip and Serve Notifications
- Food Readiness Countdowns
- Custom Food Doneness Alerts
- Step-by-step Barbecuing Assistance



WEBER-STEPHEN PRODUCTS LLC
www.weber.com

© 2024 Designed and engineered by Weber-Stephen Products LLC,
1415 S. Roselle Road, Palatine, Illinois 60067 USA.